 


2 Gang Wall Mount Dimmer

Written by Carl Holden

Thursday, 22 December 2011 13:54 - Last Updated Saturday, 13 December 2014 16:04

2 gang wall mount dimmer

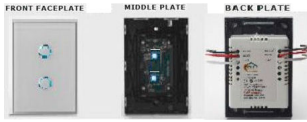

A PLLC 2 Gang 2 x 250 Watt 50 Hz Wall Mount dimmer, showing the top face plate removed exposing the

Electronic circuitry immediately behind the 2 Gang push button, as well as the REAR of the Assemble.

4 Wires are required – Active (Red) – Neutral (Blue or Black) –2 x Load (White)

Prior to placing in Setup Mode, it is recommended to always “Default” the unit.

8. Remove the Front Faceplate

9. Press the UP Button 5 times....LED begins to flash...UP button can be found on Electronic board

10. Press the down button 10 times... DOWN button can be found on Electronic board

11. Then Press the UP button 2 times...LED stops flashing....the Unit has now be defaulted

12. Repeat Steps 1 & 2, to now place the defaulted unit in Setup Mode...Press UP button 5 times, to put device into Setup Mode


13. By using the UPSTART Software, downloaded from the PLLC Web site, you can now discover your UPB device and place or create your NEW Network

2 Gang Wall Mount Dimmer

Written by Carl Holden


Thursday, 22 December 2011 13:54 - Last Updated Saturday, 13 December 2014 16:04

The software used to configure and program the UPB system is called "UPSTART".

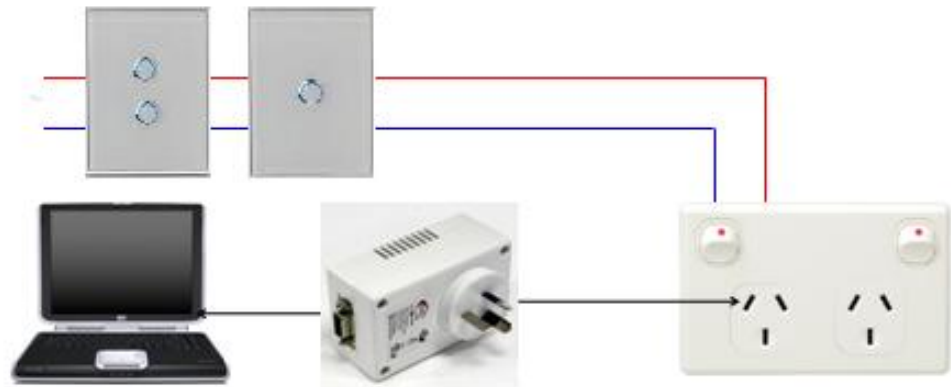

14. The UPSTART Wizard can provide a Step by Step procedure for installation.

 Example below we see a double 2 x 250W Master dimmer switch controlling a single lighting circuit in a bedroom.

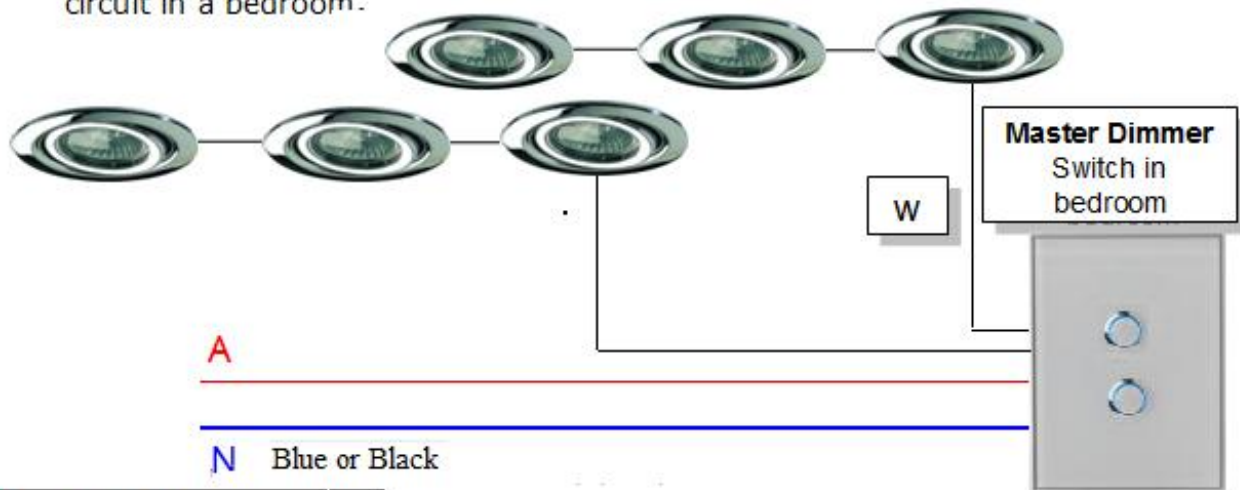

A = Active Wire
N = Neutral Wire
Blue or Black
W = Control wire for light