

Saturday, 07 January 2012 18:46 - Last Updated Monday, 09 January 2012 12:49



1 / 4

Appliance Dimmer

Written by Carl Holden

Saturday, 07 January 2012 18:46 - Last Updated Monday, 09 January 2012 12:49

wattages to be used as a guide only. Care should be taken to confirm your device Wattage usage.

.."ENSURE THAT YOUR UPB APPLIANCE DIMMER MODULE IS SET TO SNAP ON AND SNAP OFF"...THIS IS CRITICAL!.

For control "OFF and ON" of devices which have a higher wattage than 250 watts, it is recommended that a PLLC UPB **Appliance Relay** is used....see section under "Appliance Relay"

| APPLIANCE | WATTAGE | UPB Appliance Dimmer Yes/No |
|-------------------------|---------|-----------------------------|
| Aquarium | 80 | YES |
| Clock radio | 10 | YES |
| Coffee Maker | 1050 | NO |
| Washing Machine | 425 | NO |
| Cloths Dryer | 3400 | NO |
| Dishwasher | 1800 | NO |
| dehumidifier | 785 | NO |
| Electric Blanket single | 60 | YES |
| Electric Blanket double | 100 | YES |
| Ceiling Fan | 120 | YES |
| Fan | 153 | YES |
| Hair Dryer | 1538 | NO |
| Heater | 1125 | NO |
| Cloths Iron | 1400 | NO |
| Heater | 1125 | NO |
| Microwave Oven | 925 | NO |
| Refrigerator | 725 | NO |
| Television 19" | 110 | YES |
| Television 27" | 113 | YES |
| Television 36" | 133 | YES |
| Television (51- 61) | 170 | YES |

Appliance Dimmer

Written by Carl Holden

Saturday, 07 January 2012 18:46 - Last Updated Monday, 09 January 2012 12:49

| | | |
|--------------------------|------|-----|
| Television Flat screen) | 120 | YES |
| Toaster | 1100 | NO |
| Toaster Oven | 1225 | NO |
| VCR | 19 | YES |
| DVD | 23 | YES |
| Vacuum Cleaner | 1220 | NO |
| Water Heater | 5000 | NO |
| Water Pump | 675 | NO |
| Water Bed (w/heater) | 250 | YES |
| computer | 270 | NO |
| Radio | 400 | NO |

Prior to placing in Setup Mode, it is recommended to always "Default" the unit.

1. Press the UP Button 5 times.... LED begins to flash GREEN ...
2. Press the DOWN button 10 times... LED now starts to Flash RED
3. Then Press the UP button 2 times...LED stops flashing....the Unit has now be defaulted
4. Now place to unit in Setup Mode ...Press UP button 5 times, to put device into Setup Mode....LED starts flashing GREEN
5. By using the UPSTART Software, downloaded from the PLLC Web site, you can now discover your UPB device and place or create your NEW Network

The software used to configure and program the UPB system is called "UPSTART".



Appliance Dimmer

Written by Carl Holden

Saturday, 07 January 2012 18:46 - Last Updated Monday, 09 January 2012 12:49

6. The UPSTART Wizard can provide a Step by Step procedure for installation